



SEAMLESS MOVEMENT, SECURE SUPPORT

WALL TO GLASS SHOWER HINGE

AT A GLANCE



BEST FOR

Connecting a
frameless shower
door directly to a
fixed glass panel





MATERIAL

Crafted from Stainless
Steel 304



INSTALLATION

-

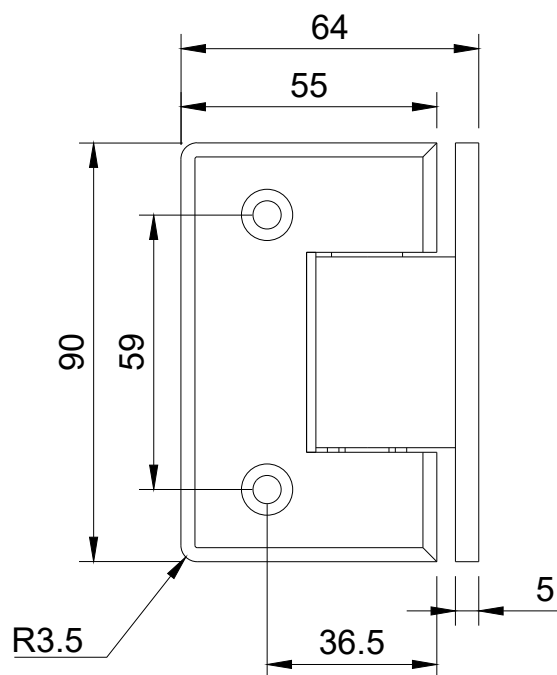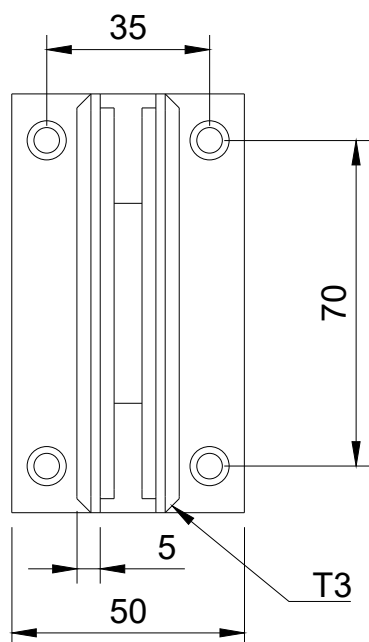

Specifications

MATERIAL

Crafted from **SS304**

PRODUCT TYPE

180° wall-to-glass shower hinge

SUITABLE GLASS

Toughened safety glass ·
Stated glass thickness **11–16 mm** ·
Glass-to-glass clearance **2–4 mm**

SCREW TORQUE

M6 **10–12 Nm**

MAXIMUM STATED LOAD

30 kg per hinge

APPLICATION

Frameless shower doors

DIMENSIONS

Overall size **64 x 90 mm**

HINGES

Glass side hinge width **55 mm**

GLASS

Glass fixing centres **55 mm** ·
Glass plate thickness **5 mm**

WALL FIXING

Wall mounting plate width **50 mm** ·
Wall fixing centres **70 mm** side & **35 mm**
top & bottom

HOLES


Horizontal glass-hole position **36.5 mm**

RADIUS

Corner radius **R3.5**

EDGE

Edge chamfer **T3**

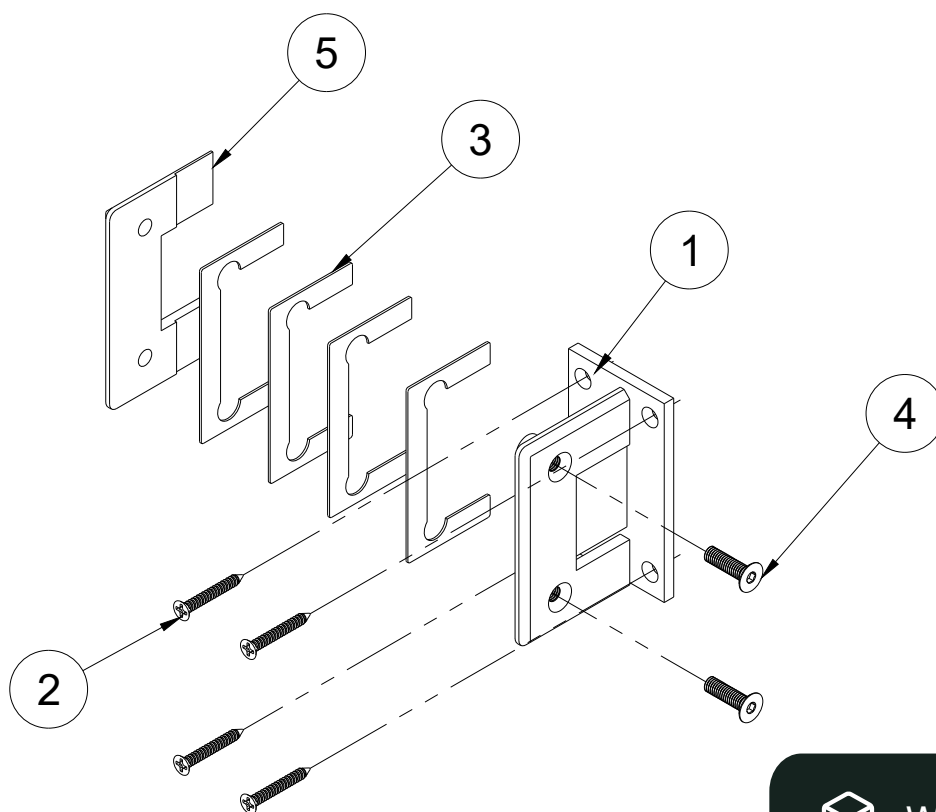

What's in the box

INCLUDED

- | | |
|-----------|--------------------------|
| 1x | Wall-to-glass hinge body |
| 1x | Glass clamping plate |
| 1x | Protective gasket set |
| 2x | Glass fixing screws |
| 4x | Wall mounting screws |

EXPLODED VIEW

- ① Wall-to-glass hinge body
- ② Wall mounting screws
- ③ Protective glass gasket set
- ④ Glass fixing screws
- ⑤ Glass clamping plate

Finish Options



Antique Brass
AEA



Brushed Nickel
AEA



Brushed Brass
PVD



Brushed Copper
PVD




Gun Metal
PVD

Installation Guide

PLUMBER REQUIRED AS/NZS 3500


01

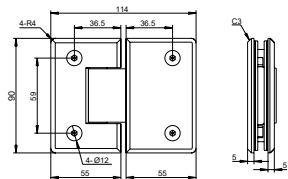

Prepare the installation

Confirm the glass holes and cut-outs match the hinge drawing. Check the wall for concealed plumbing, electrical cables and a suitable structural fixing point.


02



Fix the hinge to the wall

Mark the wall fixing positions, drill using a suitable bit and install fixings appropriate for the wall construction. Loosely secure the hinge and check that it is plumb.


03

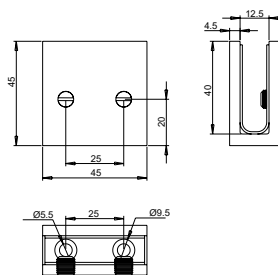

Position the glass

Support the shower door using suitable setting blocks. Place the supplied gaskets between the hinge and every glass surface.

04

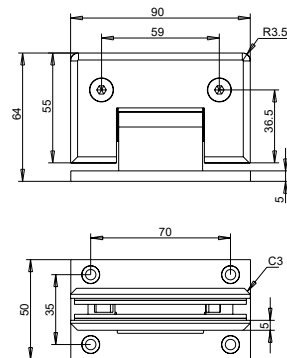

Secure the glass

Fit the glass clamping plate and start both glass fixing screws by hand. Align the door before tightening the screws evenly.



FINAL CHECK · ALIGN AND TEST

Confirm all hinges share the same vertical axis. Tighten M6 screws to 10–12 Nm, then slowly test the complete door movement.

Care & Maintenance



 MILD SOAP & WARM WATER

Clean with mild soap and warm water.

 SOFT CLOTH ONLY

Use soft cloth only.



 NO CITRUS, BLEACH OR ABRASIVE CLEANERS

These can damage the surface and affect longevity

Compliance

 WATERMARK CERTIFIED

AS/NZS 3718



★ WELS APPROVED



LESS THAN 0.25%



INSTALLATION STANDARD

AS/NZS 3500.1 & 3500.4