rainco



COMPLETE SHOWER. BEAUTIFULLY BALANCED

GOOSENECK SHOWER RAIL SET

AT A GLANCE

BEST FOR

Showers for those who value design without compromise

FEEL


Smooth sliding mechanics and a finish that resists daily wear

INSTALLATION

Wall-mounted, plumber required

rainco

Front View · Side View

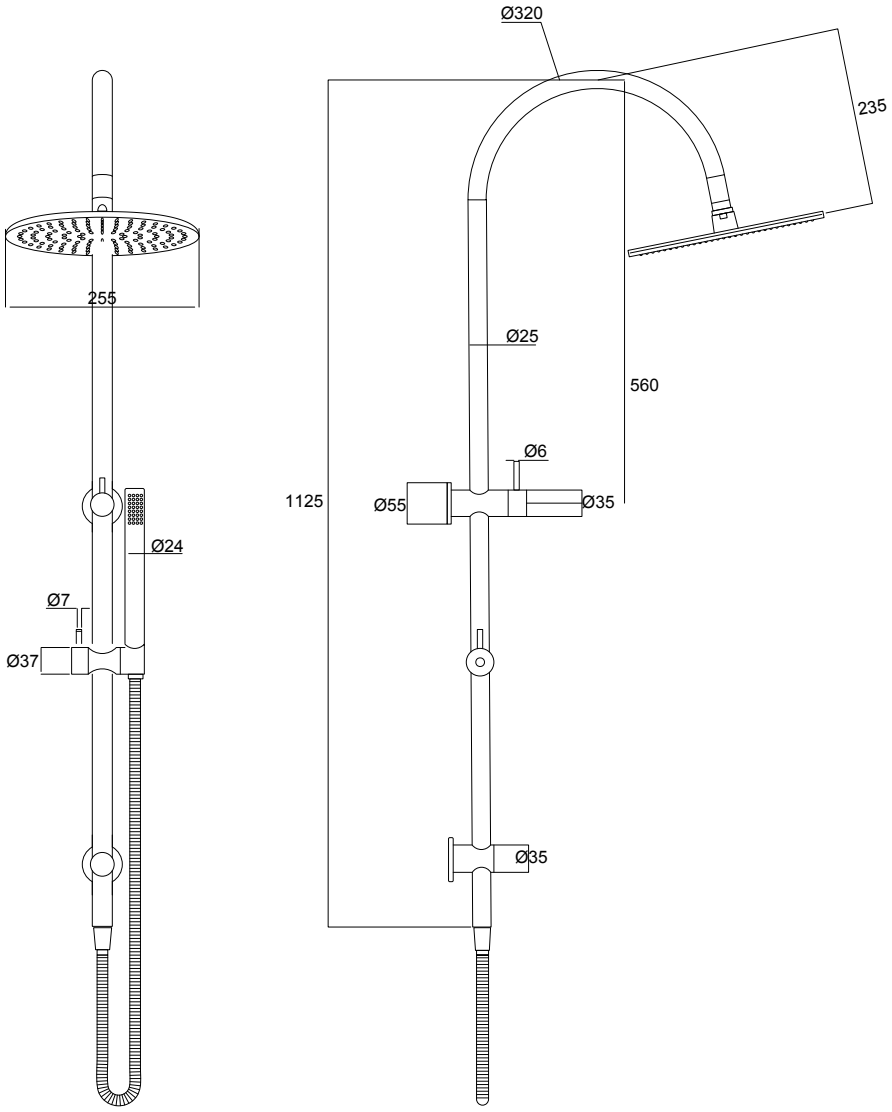

Specifications

MATERIAL

Solid **Brass**
Hand wand - **Stainless Steel** 304 (SS304)

FLOW RATE

8L/min (WELS 3 Star)

PRESSURE RANGE

50–800 kPa

CONNECTIONS

Standard **G1/2”**

MOUNTING · CONNECTION


Wall-mounted · **G1/2**

DIMENSIONS

Diverter handle diameter **Ø35 mm** · Shower head diameter **Ø255 mm** · Hand wand hose length **150 cm** · Rail diameter **Ø25 mm**

rainco

Exploded View

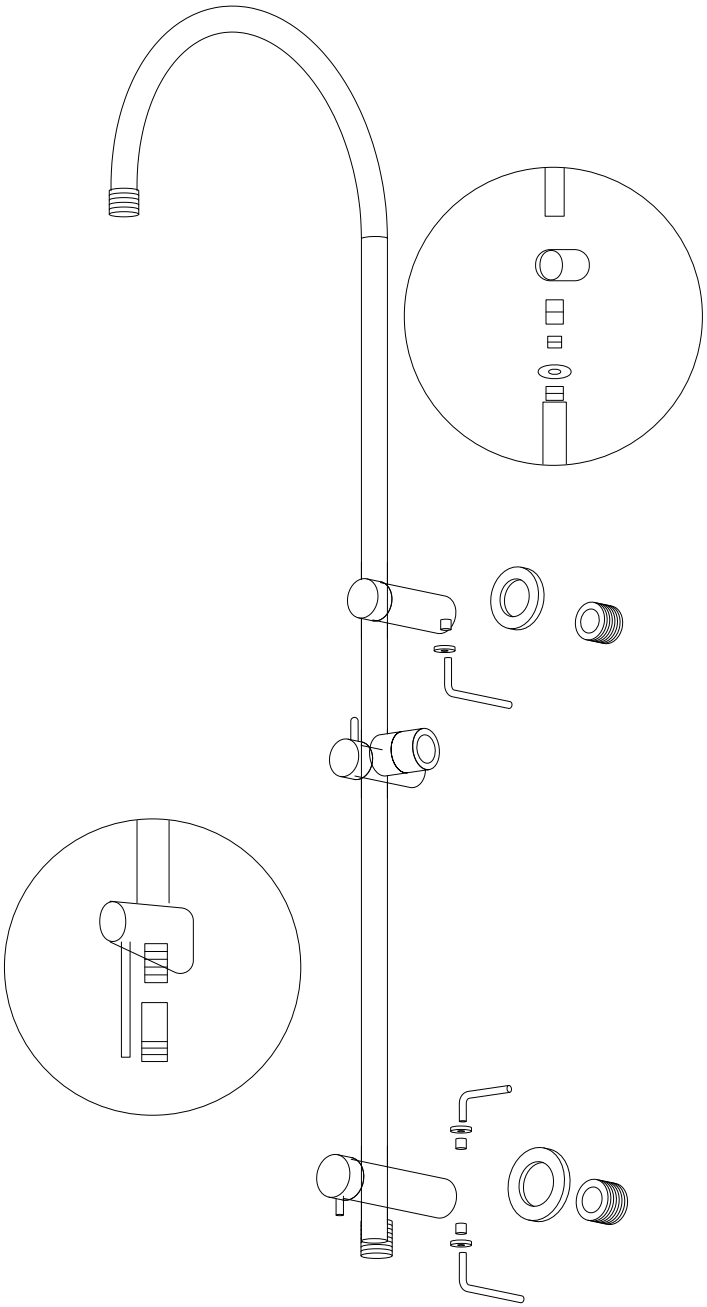

What's in the box

INCLUDED

1x	Shower Head
1x	150cm Hand Shower Wand Hose
1x	Round Hand Shower Head
2x	Cover Rings
1x	Shower Diverter
1x	Shower Head Arm
1x	Adjustable Rail
2x	Fixing Screws
2x	Hollow Wall Anchors
2x	Grub Screws
1x	Mini Hex Wrench

Finish Options


Antique Brass	**Brushed Nickel**	**Brushed Brass**	**Brushed Copper**	**Gun Metal**
AEA	AEA	PVD	PVD	PVD

rainco

Installation Guide

PLUMBER REQUIRED AS/NZS 3500


01

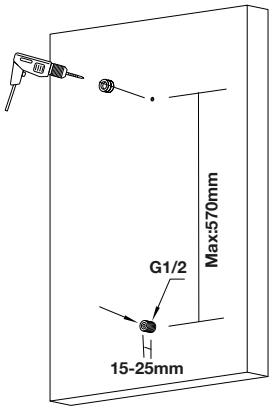

Mark and Drill Holes

Measure and mark the positions for the shower rail kit. Drill the required holes, keeping the water outlets at the correct distance apart. The maximum mounting height is 530 mm, as shown in the picture.


02

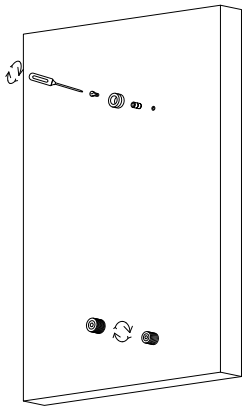

Install Wall Fixings

Insert the wall plugs into the drilled holes and secure the mounting brackets using the fixing screws.


03

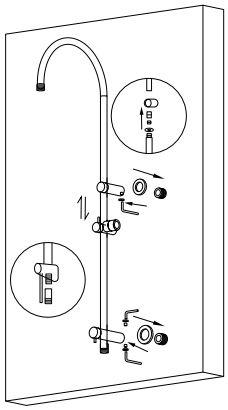

Install Shower Rail

Place the cover plates onto the wall fixings first. Attach the shower rail and tighten securely. Connect the shower valve to the water outlets and check for leaks.

04

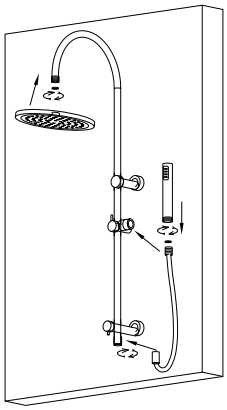

Attach Shower Heads and Hose

Attach the shower head to the shower arm. Connect the hand shower hose to the outlet and hand shower. Turn on the water and check that everything is working properly with no leaks.

INSTALLATION GUIDE

Preparation: Ensure all components are ready according to the picture. Check that the water outlets are G1/2 and that the pipework is positioned correctly before installation.

Care & Maintenance

MILD SOAP & WARM WATER

Clean with mild soap and warm water.

SOFT CLOTH ONLY

Use soft cloth only.

NO CITRUS, BLEACH OR ABRASIVE CLEANERS

These can damage the surface and affect longevity

Compliance

WATERMARK CERTIFIED

AS/NZS 3718

WELS APPROVED

5 STAR · 6 L/MIN

NCC LEAD-FREE

LESS THAN 0.25%

INSTALLATION STANDARD

AS/NZS 3500.1 & 3500.4