



A REFINED FINISH FOR EVERY CABINET

LOMBARDY CABINETRY DOOR KNOB

AT A GLANCE



BEST FOR

Internal doors requiring
a compact and discreet
floor-mounted stop




MATERIAL

Crafted from Stainless
Steel 304



INSTALLATION

Rear-fixed

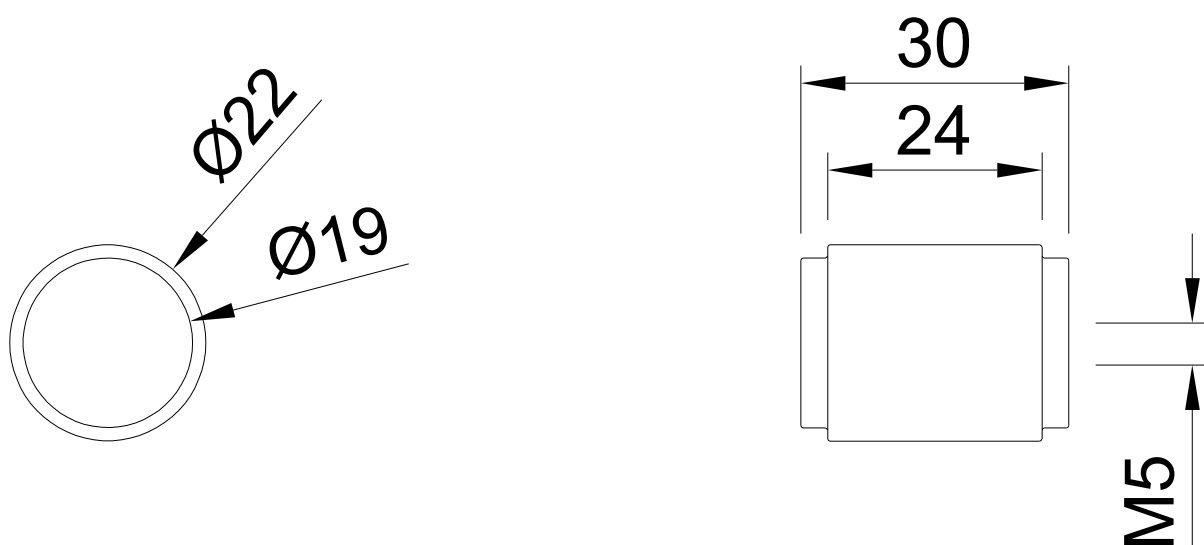

Specifications

MATERIAL

Crafted from **Stainless Steel 304**

INSTALLATION TYPE

Rear-fixed · Single-hole installation

PROFILE


Cylindrical profile · Suitable for cabinet doors and drawer fronts

DIMENSIONS

Overall projection **30 mm** · Main body length **24 mm** · Overall diameter **$\varnothing 22$ mm** · Front face diameter **$\varnothing 19$ mm**

FIXING

Fixing thread **M5**

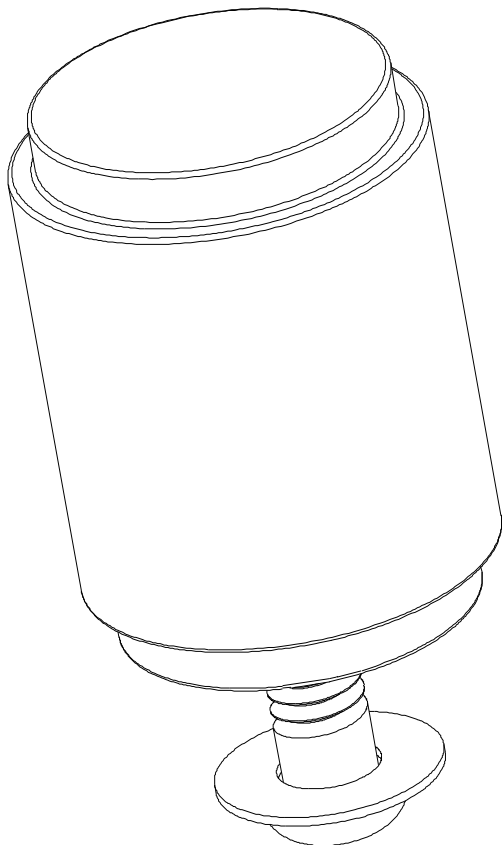

What's in the box

INCLUDED

- | | |
|-----------|----------------------------|
| 1x | Lombardy Cabinet Door Knob |
| 1x | M5 threaded fixing stud |
| 1x | Fixing Washer |

Finish Options



Antique Brass
AEA



Brushed Nickel
AEA



Brushed Brass
PVD




Brushed Copper
PVD



Gun Metal
PVD

Installation Guide


01

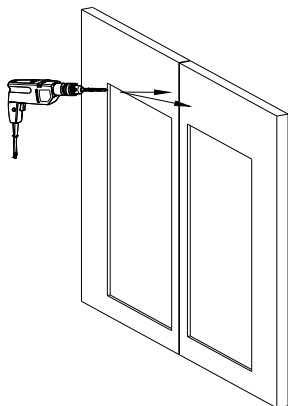

Mark the position

Measure and mark the centre of the knob position. When installing multiple knobs, use a template to maintain consistent alignment.


02

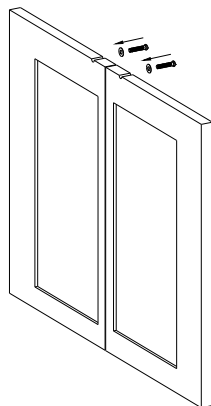

Drill the fixing hole

Drill a straight clearance hole through the cabinet panel to suit the M5 fixing screw. Use a backing block where possible to reduce breakout on the rear surface.


03

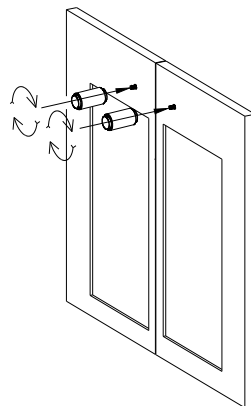

Fit the knob

Place the washer onto the fixing screw and insert the screw through the rear of the cabinet panel. Thread the knob onto the screw from the front.

04

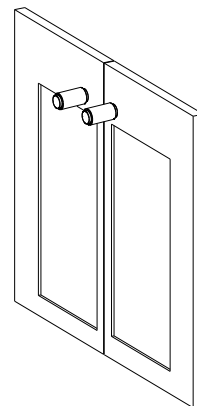

Secure and check

Hold the knob in its final position and tighten the fixing screw until secure. Do not overtighten. Confirm the knob is straight and does not move.



IMPORTANT

The screw must engage securely without reaching the end of the threaded hole. A different screw length may be required depending on the cabinet panel thickness. Do not overtighten, as this may damage the cabinetry or product. Protect the finished surface during installation.

Care & Maintenance



MILD DETERGENT & WARM WATER

Clean regularly using warm water and mild detergent.



SOFT CLOTH ONLY

Clean and dry with a soft cloth only.



NO ACIDIC OR ABRASIVE CLEANERS

Do not use acidic cleaners, abrasive products, scouring pads or coarse brushes, as these may damage the finish.