


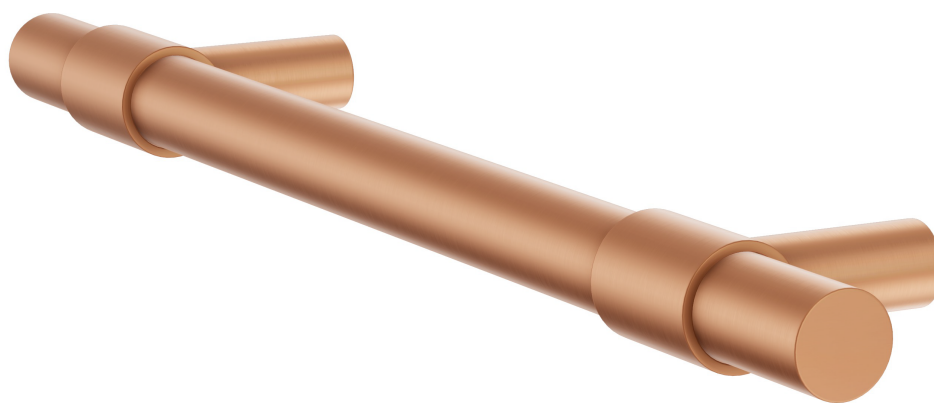

CLEAN LINES, CONFIDENT GRIP

LOMBARDY CABINETSRY PULL HANDLE 200MM

AT A GLANCE



BEST FOR

Kitchen cabinets,
bathroom vanities,
wardrobes, drawers and
other internal cabinetry




MATERIAL

Crafted from Stainless
Steel 304



INSTALLATION

Rear-fixed

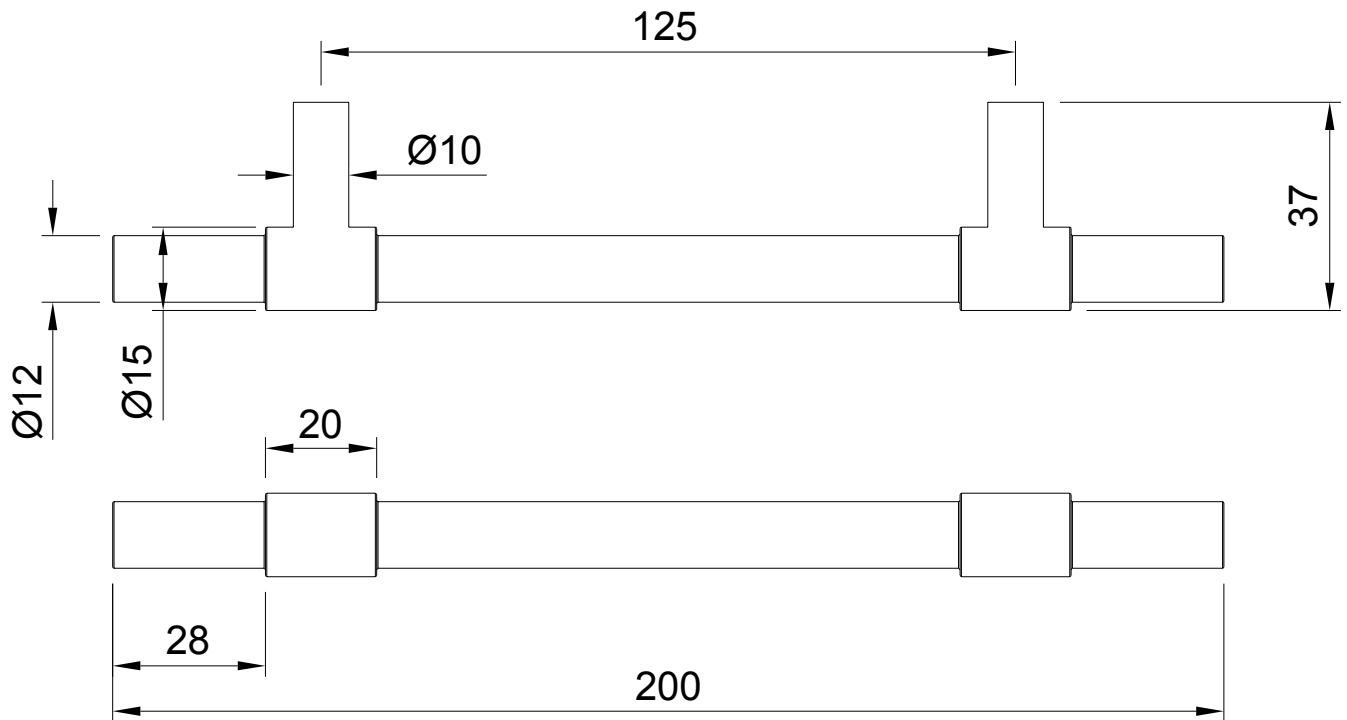

Specifications



MATERIAL

Crafted from **Stainless Steel 304**



INSTALLATION TYPE

Rear-fixed · Two-hole installation ·
Fixing centres **125 mm**



PROFILE

Cylindrical pull-handle profile ·
Suitable for cabinet doors and
drawer fronts




DIMENSIONS

Overall length **200 mm** · Fixing-hole centres
125 mm · Overall projection **37 mm** · Main
handle diameter **Ø15 mm** · End-bar diameter
Ø12 mm · Mounting-post diameter **Ø10 mm**
· Mounting collar length **20 mm** · End
overhang **28 mm**



FIXING-HOLE

Recommended fixing-hole diameter **Ø7 mm**

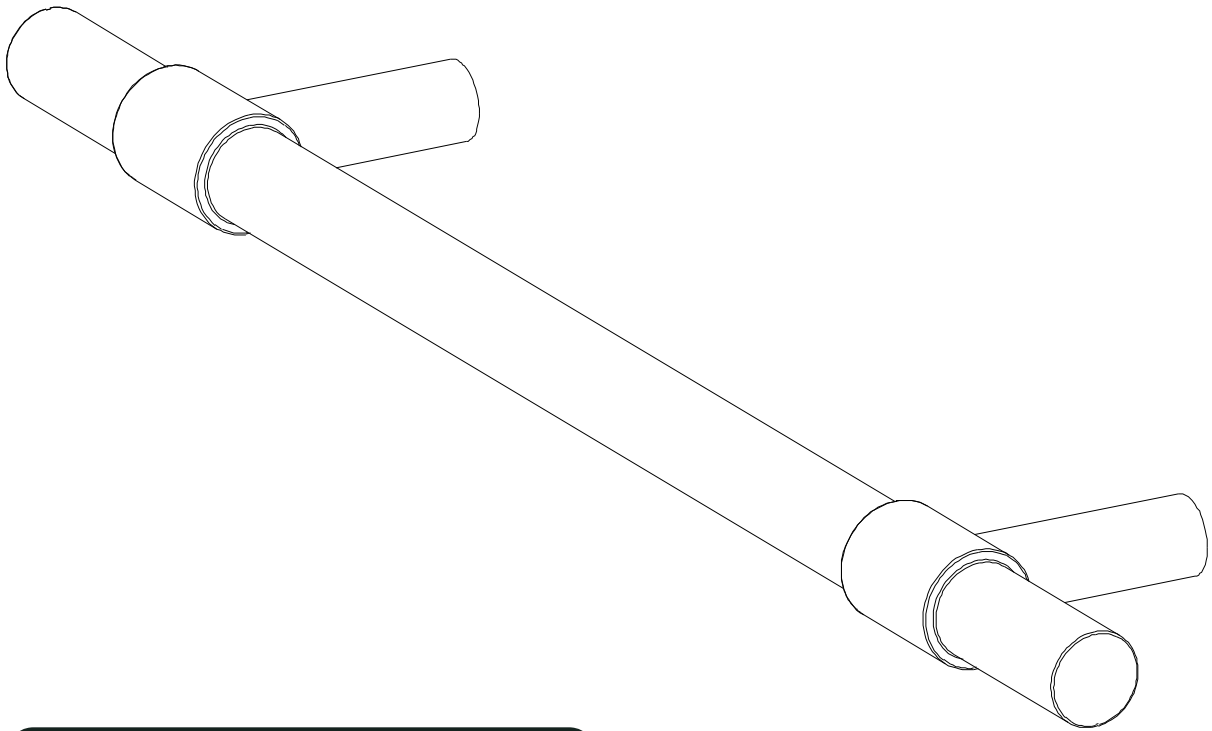

What's in the box

INCLUDED

1x Lombardy Cabinet Pull Handle

2x Fixing screws

2x Fixing washers

Finish Options



Antique Brass
AEA



Brushed Nickel
AEA



Brushed Brass
PVD




Brushed Copper
PVD



Gun Metal
PVD

Installation Guide


01

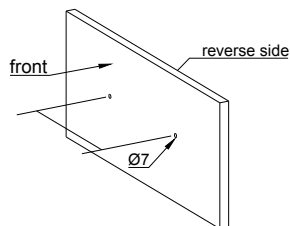

Mark the Fixing Points

Position the handle and mark the two fixing points at 125 mm centres. Use a template when installing multiple handles to maintain consistent alignment.


02

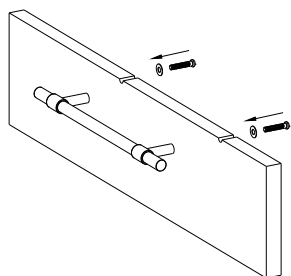

Drill the Holes

Drill two straight Ø7 mm clearance holes through the cabinet panel. Drill from the finished face and use a backing block where possible to reduce breakout.


03

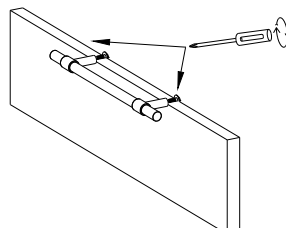

Fit the Handle

Position the handle against the front of the cabinet. From the rear, place a washer onto each fixing screw and insert the screws through the drilled holes. Align the screws with the threaded mounting posts.

04

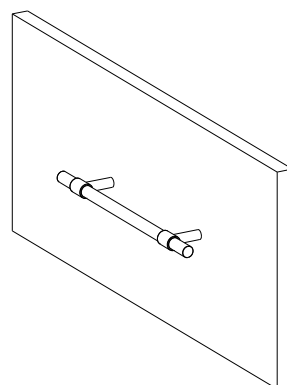

Secure and Check

Tighten both screws evenly until the handle is secure. Do not overtighten. Confirm the handle is straight, firmly mounted and does not move during use.



IMPORTANT

Confirm the 125mm fixing centres against the physical product before drilling. The fixing-screw length must suit the cabinet-panel thickness. Do not overtighten, as this may damage the handle or cabinetry. Support large doors and drawer fronts while marking and drilling. Protect finished surfaces throughout installation.

Care & Maintenance



MILD DETERGENT & WARM WATER

Clean regularly using warm water and mild detergent.



SOFT CLOTH ONLY

Clean and dry with a soft cloth only.



NO ACIDIC OR ABRASIVE CLEANERS

Do not use acidic cleaners, abrasive products, scouring pads or coarse brushes, as these may damage the finish.