




SIMPLE STORAGE, REFINED DESIGN

ROBE HOOK

AT A GLANCE

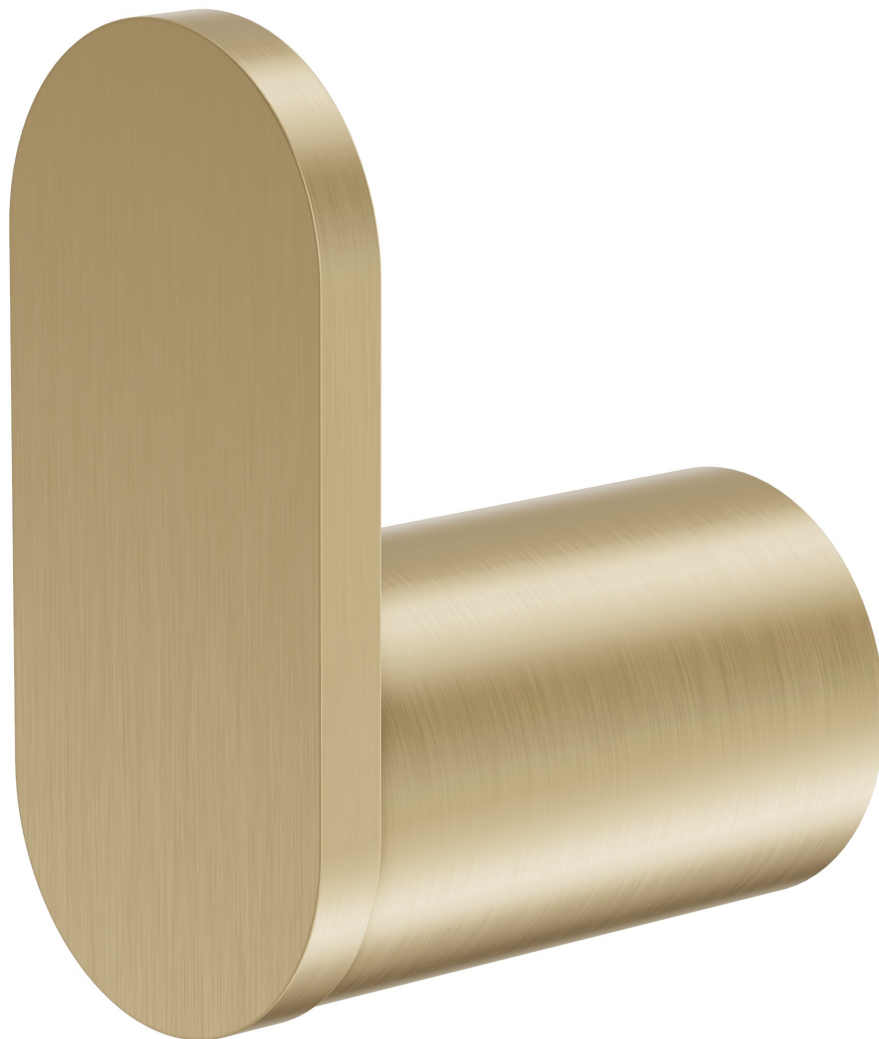

BEST FOR

Keeping robes,
towels and clothing
conveniently within
reach




MATERIAL

Crafted from Stainless
Steel 304



INSTALLATION

Wall mounted

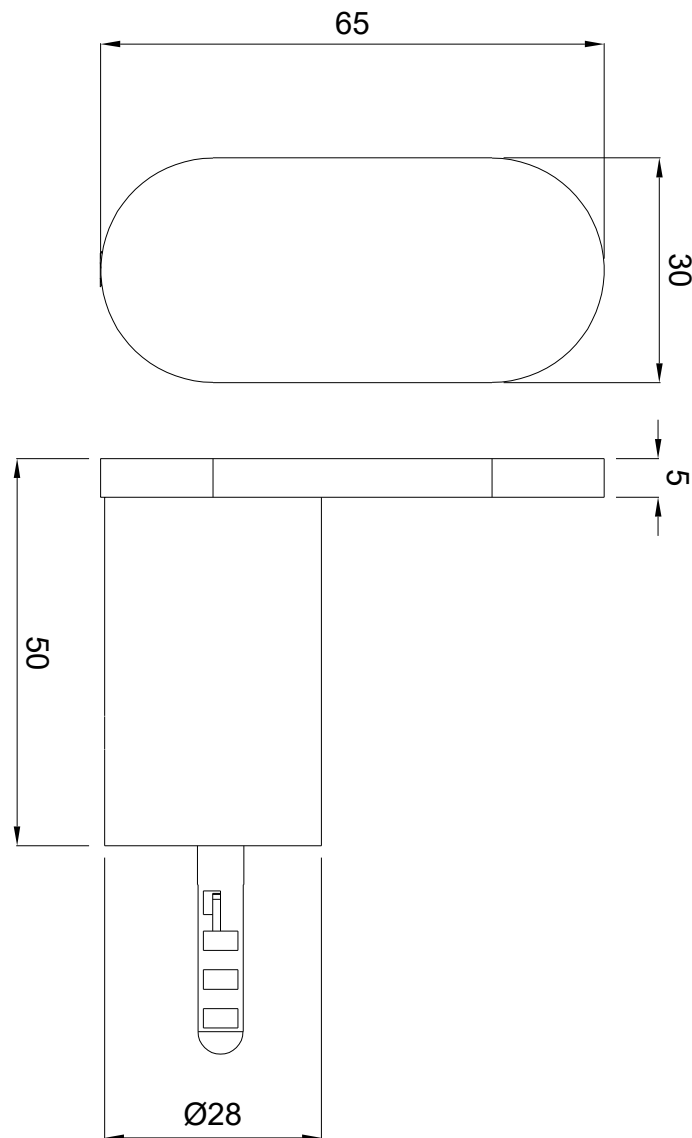

Specifications



MATERIAL

Stainless **304** Steel



MOUNTING

Concealed wall fixings



DIMENSIONS

Overall height **65 mm** · Overall width **30 mm** · Wall projection **50 mm**
· Hook height **28 mm**




What's in the box

INCLUDED

1x	Robe hook
1x	Concealed mounting plate
2x	Wall-fixing screws
2x	Wall plugs
1x	Grub screw
1x	Allen key

EXPLODED VIEW

- ① Concealed mounting plate
- ② Wall fixing screws
- ③ Robe Hook
- ④ Grub screw
- ⑤ Allen Key

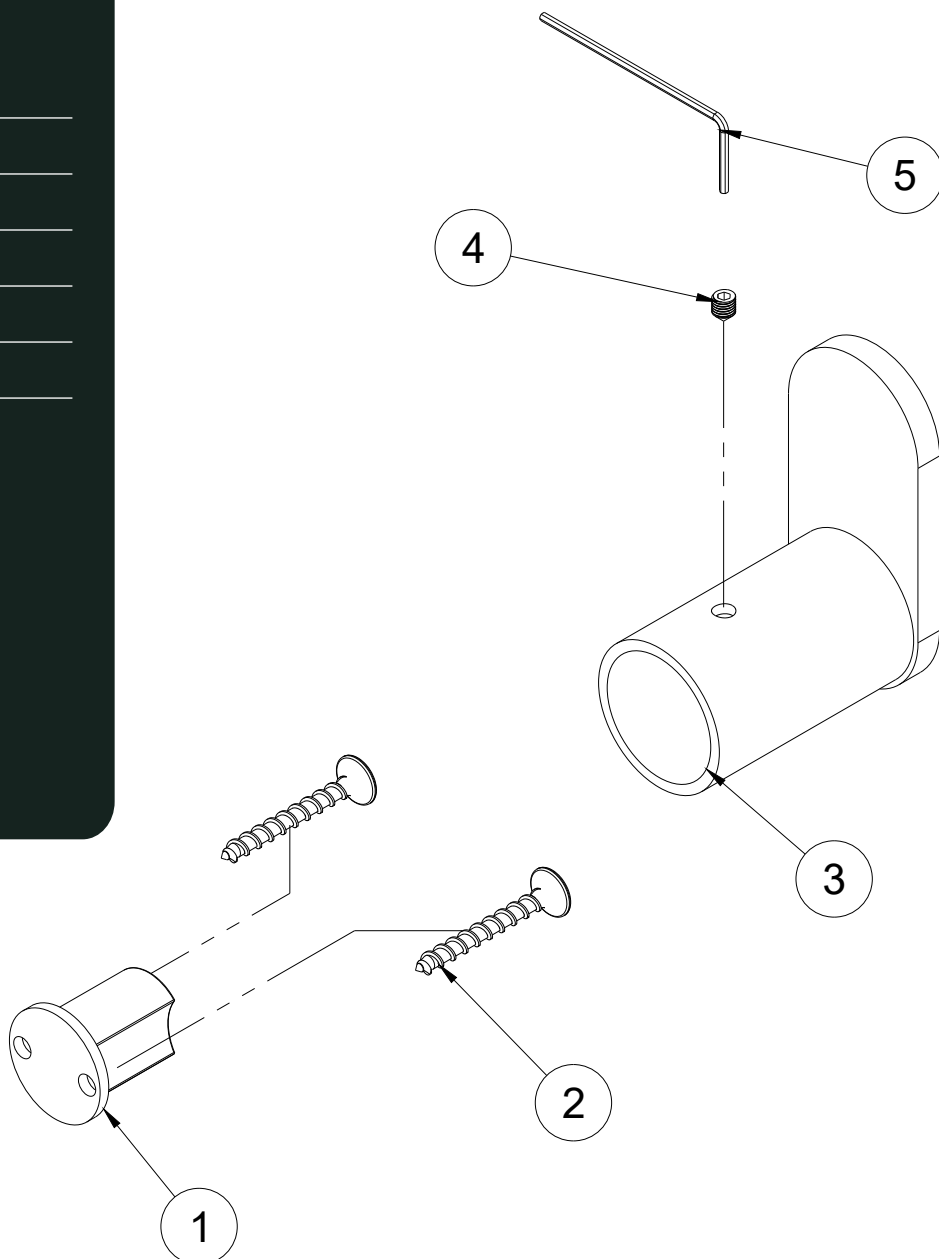

Finish Options



Antique Brass
AEA



Brushed Nickel
AEA



Brushed Brass
PVD



Brushed Copper
PVD




Gun Metal
PVD

Installation Guide

PLUMBER REQUIRED AS/NZS 3500


01

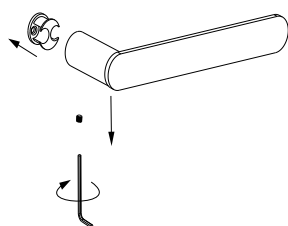

Mark the position

Choose the installation height and check for concealed services. Remove the mounting plate using the supplied Allen key.


02



Drill the holes

Hold the mounting plate against the wall, mark the fixing holes and drill using a suitable bit.


03

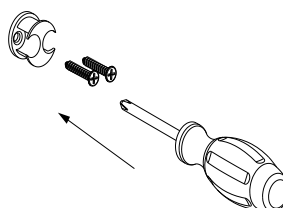

Secure the plate

Insert suitable wall plugs and screw the mounting plate securely to the supporting wall.

04

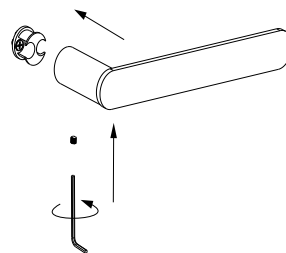

Fit the robe hook

Position the hook over the mounting plate and tighten the concealed grub screw. Check that it is straight and secure.



FINAL CHECK · DISCLAIMER

Do not place weight on the robe hook until every fixing is secure.

Care & Maintenance



MILD SOAP & WARM WATER

Clean with mild soap and warm water.



SOFT CLOTH ONLY

Use soft cloth only.



NO CITRUS, BLEACH OR ABRASIVE CLEANERS

These can damage the surface and affect longevity

Compliance



WATERMARK CERTIFIED

AS/NZS 3718



WELS APPROVED



NCC LEAD-FREE

LESS THAN 0.25%



INSTALLATION STANDARD

AS/NZS 3500.1 & 3500.4