




REFINED FINISH, EFFORTLESS FLOW

## TILE INSERT FLOOR WASTE

AT A GLANCE

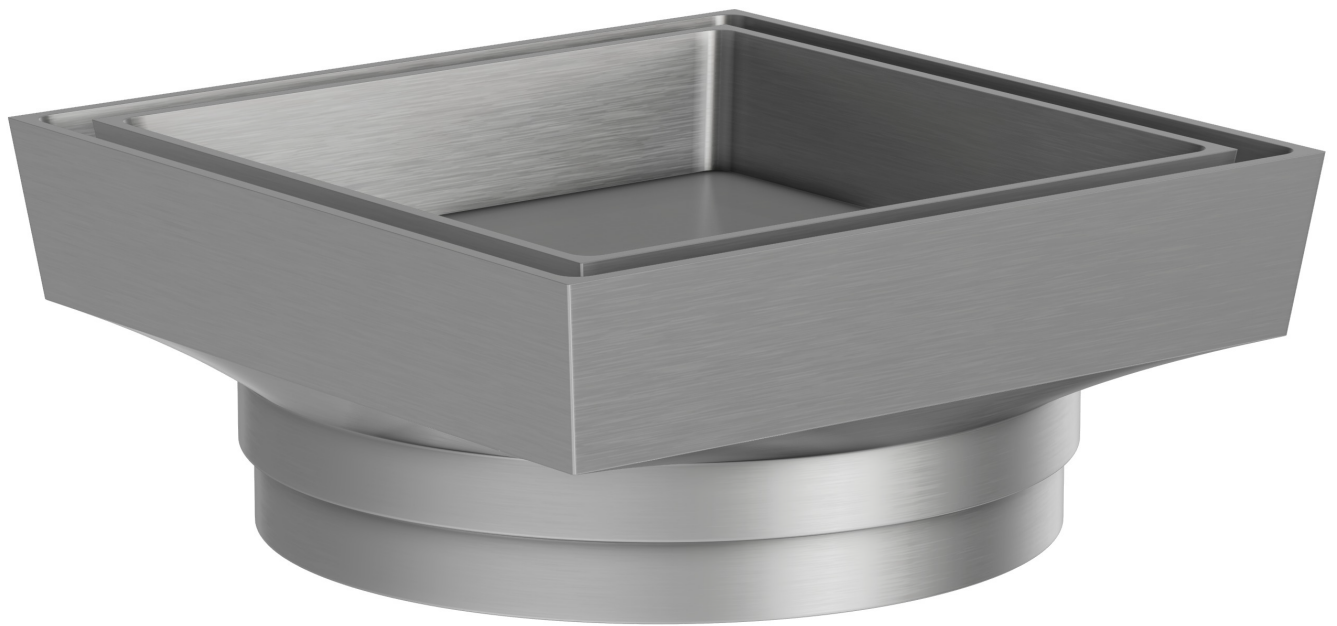

**BEST FOR**

Showers,  
Bathroom floors  
and laundry floors




**MATERIAL**

Crafted from Stainless  
Steel 304



**INSTALLATION**

Floor mounted

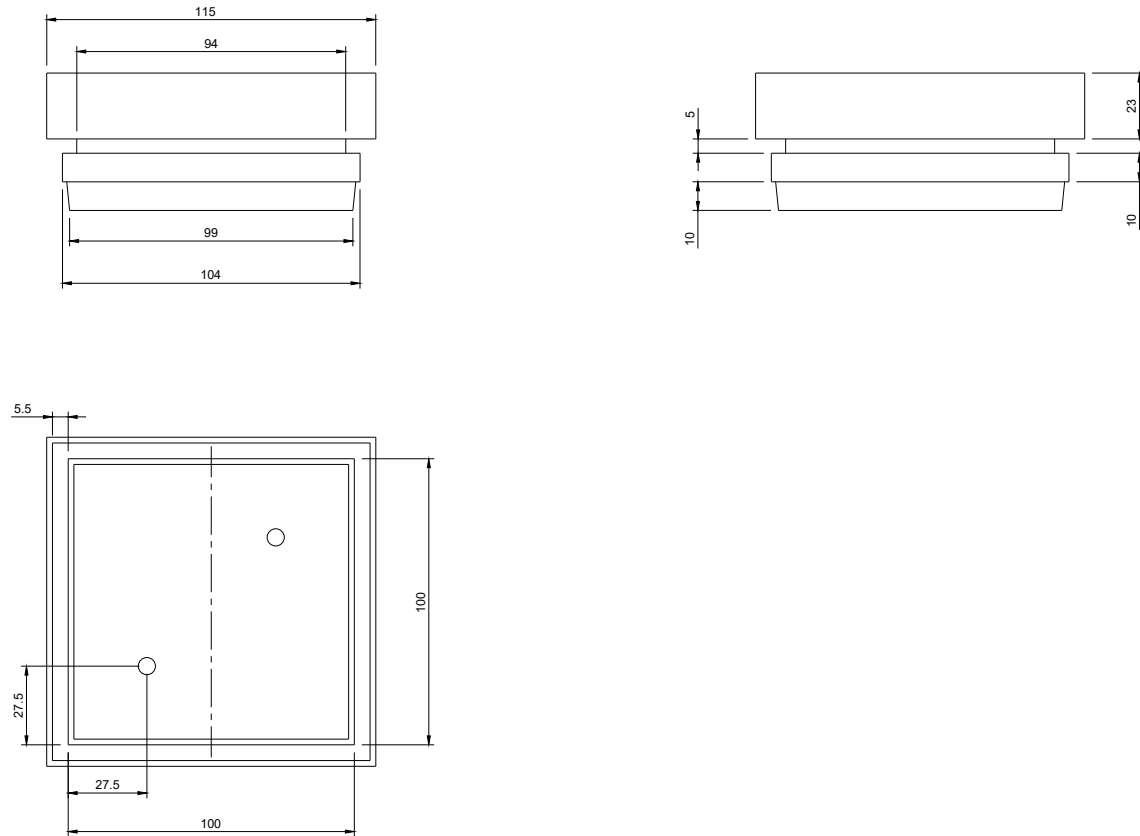

## Specifications

 MATERIAL


## Stainless **304** Steel



## DIMENSIONS

Fits 100 x 100 x 10 mm tile insert

Dimension **115x115x48 mm**

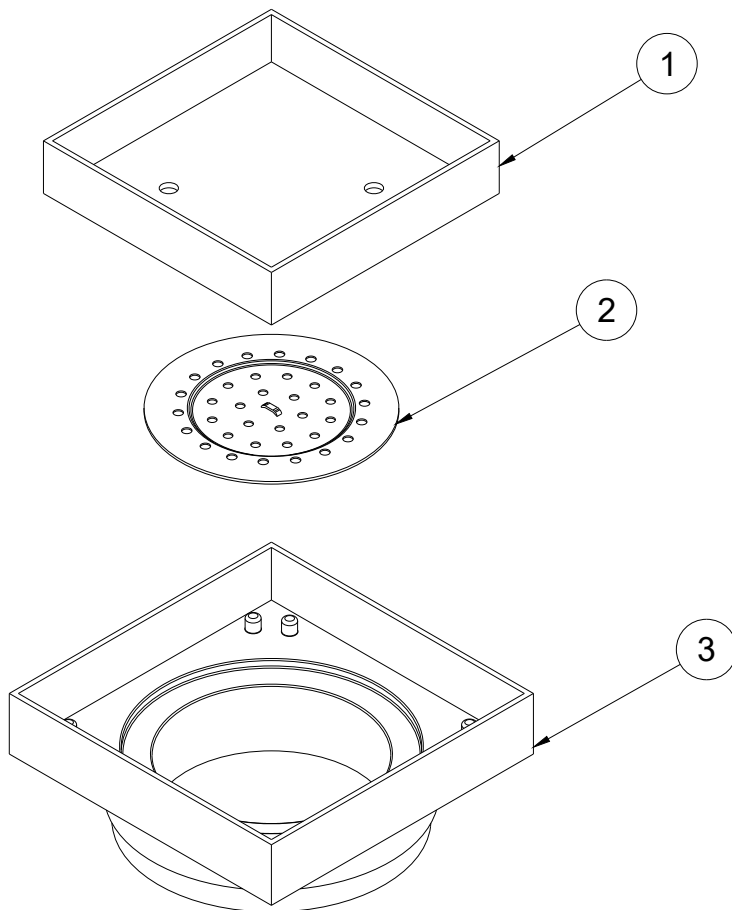

## What's in the box

### INCLUDED

|           |                            |
|-----------|----------------------------|
| <b>1x</b> | Tile insert floor waste    |
| <b>1x</b> | Removable tile insert tray |
| <b>1x</b> | Debris strainer            |
| <b>1x</b> | Waste Body                 |
| <b>1x</b> | Installation Instructions  |

### EXPLODED VIEW

- ① Removable tile insert tray
- ② Perforated debris strainer / hair catcher
- ③ Floor waste body and outlet base

## Finish Options



**Antique Brass**  
AEA



**Brushed Nickel**  
AEA



**Brushed Brass**  
PVD



**Brushed Copper**  
PVD




**Gun Metal**  
PVD

## Installation Guide

PLUMBER REQUIRED AS/NZS 3500


01

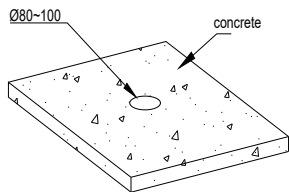

### Prepare the drain position

Confirm the floor opening and waste connection are correctly positioned and compatible with the floor-waste outlet.


02

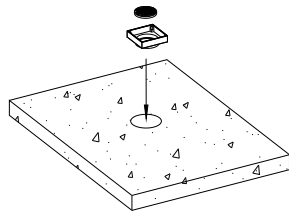

### Install and waterproof the base

Connect the floor-waste body to the drain outlet. Set it level with the finished floor height and complete the required waterproofing around the body.


03

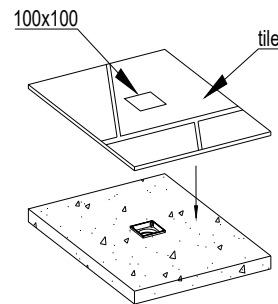

### Cut and install the tiles

Cut the surrounding floor tiles to fit neatly around the 100 x 100 mm floor-waste opening. Install the tiles with the required fall toward the waste.

04

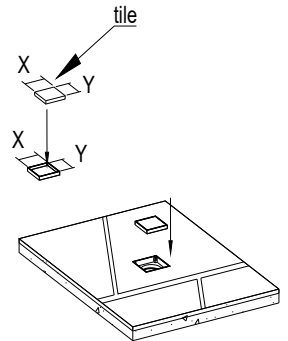

### Fit the insert tray

Cut a tile piece to fit inside the removable tray and secure it using a suitable adhesive. Fit the debris strainer, place the tray into the floor-waste body and rotate it 90° to lock it in position.



### FINAL CHECK - TURN ON & TEST

Confirm that the tray is secure, the surrounding tiles drain toward the waste and water flows freely without leaking around the waterproofed connection.

## Care & Maintenance



### MILD SOAP & WARM WATER

Clean with mild soap and warm water.



### SOFT CLOTH ONLY

Use soft cloth only.



### NO CITRUS, BLEACH OR ABRASIVE CLEANERS

These can damage the surface and affect longevity

## Compliance



### WATERMARK CERTIFIED

AS/NZS 3718



### WELS APPROVED



### NCC LEAD-FREE

LESS THAN 0.25%



### INSTALLATION STANDARD

AS/NZS 3500.1 & 3500.4