rainco

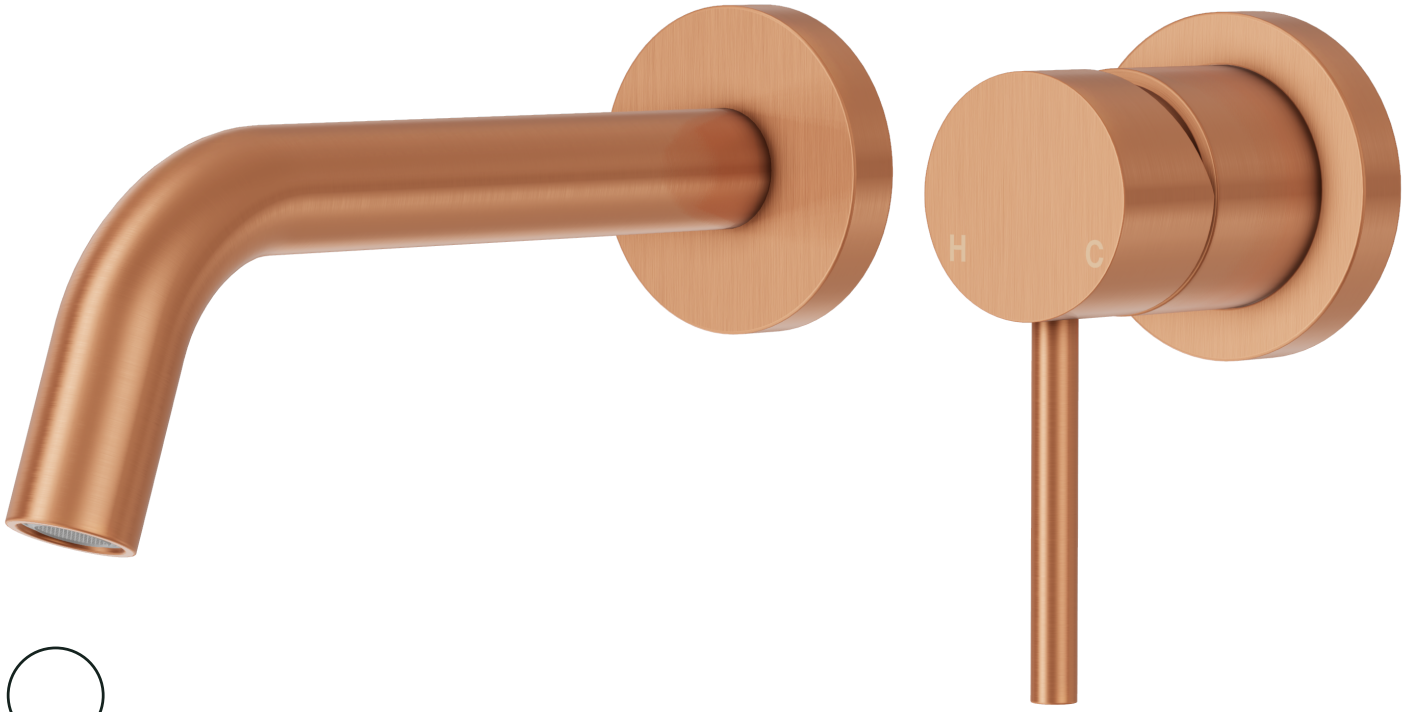



SMOOTH AND CONTROLLED WATER FLOW

HAVEN MINIMAL WALL BASIN MIXER TAP

AT A GLANCE

BEST FOR

Everyday bathrooms for those who value space, flow and detail

FEEL

Precise temperature and flow control

INSTALLATION

Wall-mounted, plumber required

rainco

Front View · Side View

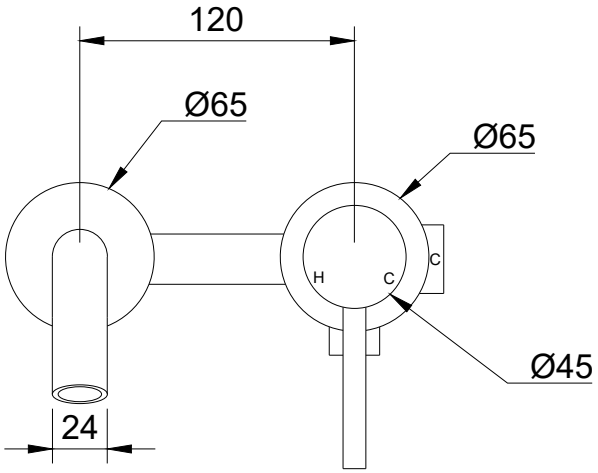

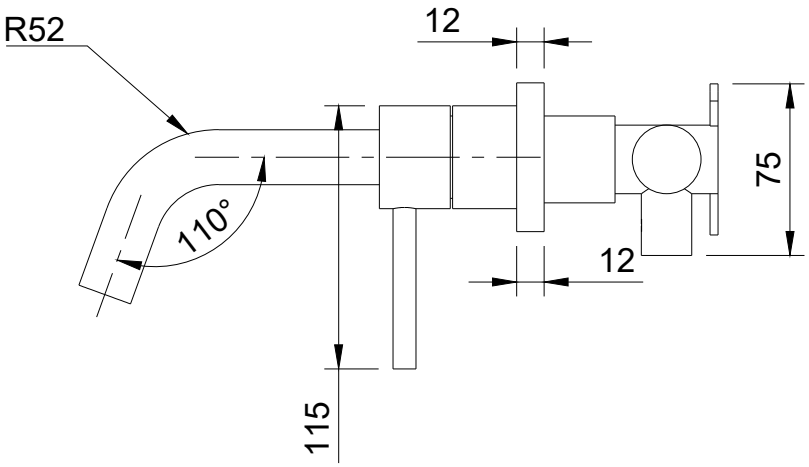

Specifications

MATERIAL

Solid **Lead-Free** Brass Construction

CARTRIDGE

Citec ceramic cartridge

FLOW RATE

5 L/min · WELS 6 Star

PRESSURE RANGE

50–800 kPa

TEMPERATURE

4–80 °C

CONNECTIONS

Standard **G1/2”**

MOUNTING

Wall-mounted · cut-out **Ø45 mm**

DIMENSIONS

Diameter **65 mm** · spout **Ø25 mm**

rainco

Exploded View

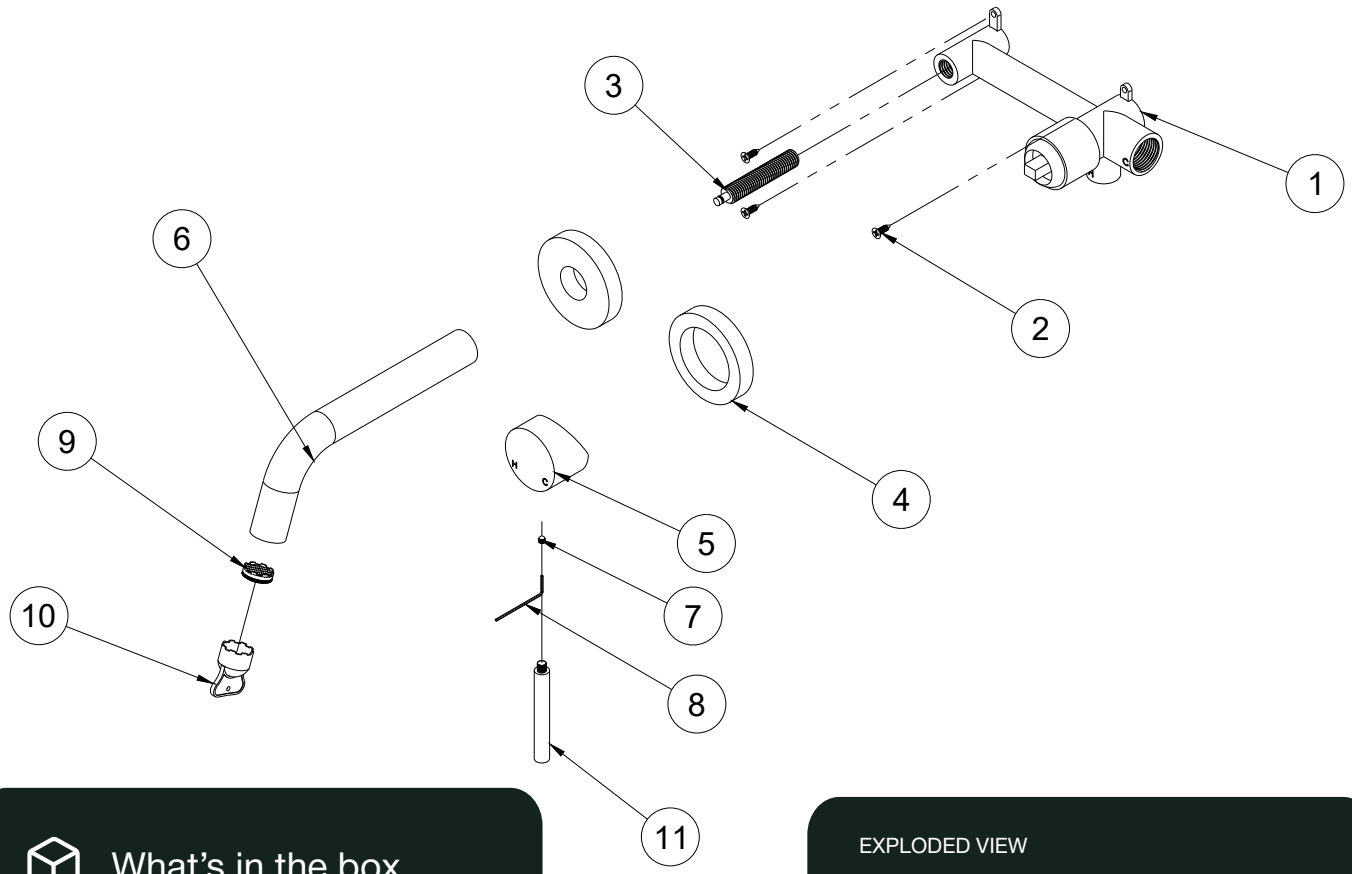

What's in the box

INCLUDED

1x	In-wall Body
1x	Tap Handle
1x	Spout
2x	Cover Rings
1x	Spout Connecter Screw
3x	Fixing Screws
3x	Hollow Wall Anchors
1x	Spare Grub Screw
1x	Aerator Remover Tool
1x	Mini Hex Wrench

EXPLODED VIEW

1. In-wall Body
2. Fixing Screws
3. Spout Connector Screw
4. Cover Rings
5. Temperature Control Handle
6. Spout
7. Grub Screw
8. Allen Wrench
9. Aerator
10. Aerator Remover Tool
11. Pin Lever

Finish Options

Antique Brass	**Brushed Nickel**	**Brushed Brass**	**Brushed Copper**	**Gun Metal**
AEA	AEA	PVD	PVD	PVD

rainco

Installation Guide

PLUMBER REQUIRED AS/NZS 3500

01

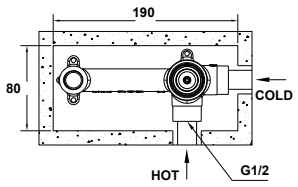

Insert Body

Install and secure the mixer body in the required position. Connect the hot and cold water pipework to the corresponding G1/2 inlets.

02

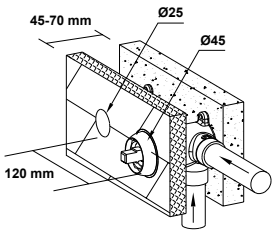

Connect Water Supply

Once the mixer has been fully tested and no leaks are found, complete the wall finish. Maintain an installation depth of 45–70 mm and cut openings of Ø45 mm for the tap handle and Ø25 mm for the spout.

03

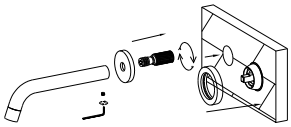

Complete wall finish

Fit the cover ring and spout connector to the in-wall body. Install the spout and secure it from underneath using the grub screw and Allen key provided.

04

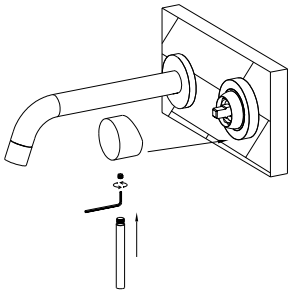

Install trim and handle

Fit the cover ring over the mixer body. Install the temperature control handle and secure it from underneath using the grub screw and Allen key. Then install and tighten the pin lever.

FINAL CHECK · TURN ON & TEST

Turn on the water supply and test for correct operation and leaks. Do not seal or tile until the tap is fully tested.

Care & Maintenance

MILD SOAP & WARM WATER

Clean with mild soap and warm water.

SOFT CLOTH ONLY

Use soft cloth only.

NO CITRUS, BLEACH OR ABRASIVE CLEANERS

These can damage the surface and affect longevity

Compliance

WATERMARK CERTIFIED

AS/NZS 3718

WELS APPROVED

6 STAR · 5 L/MIN

NCC LEAD-FREE

LESS THAN 0.25%

INSTALLATION STANDARD

AS/NZS 3500.1 & 3500.4